





1 Thread the UNDER - ROSE [SR] in the protruding squared spindle [Q]. **Fig.1**

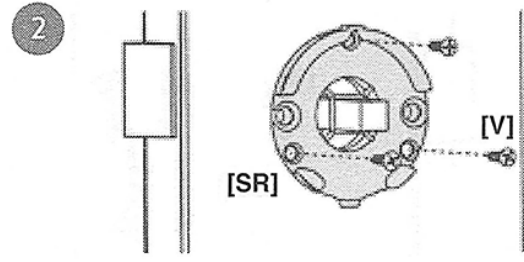


2 Use N° 3 retaining screws [V] to be fixed into relevant holes located in the UNDER - ROSE. [SR]. **Fig.2**

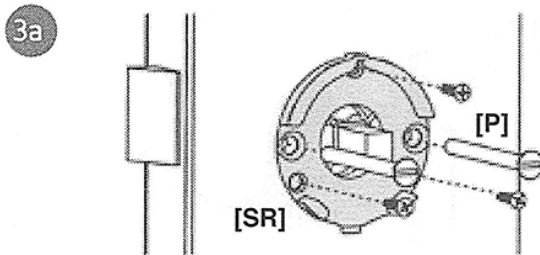


3a Only in presence of fitting kit-02 you will proceed by entering: N° 2 telescopic screws [P] into suitable holes located in the under-rose [SR] (lateral). **Fig.3a**. Above screws must be then properly tightened from other side by blocking the male part of telescopic screws [E]. **Fig.3b**

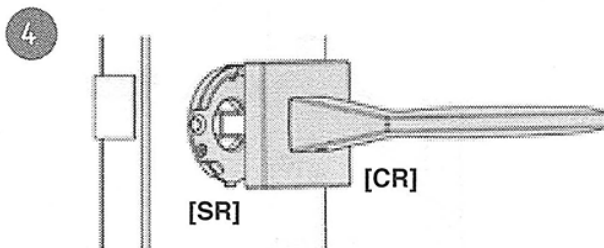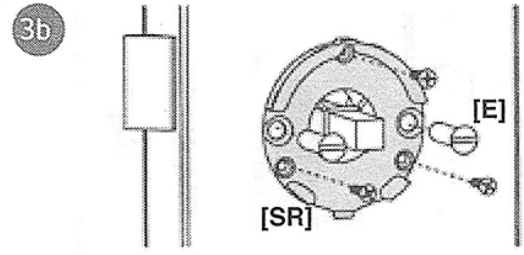


4 Apply the COVER- ROSE [CR] (already install on the handle) on the UNDER-ROSE [SR] by pressing. **Fig.4**

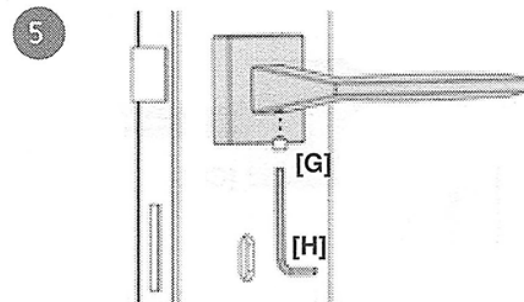

5 Block the handle by tightening the grub [G], using the provided hexagonal key [H]. **Fig.5**

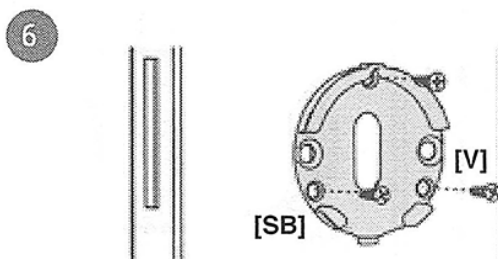


6 Place the UNDER - ROSE [SB] on the surface of the door and proceed by fixing it fastening the 3 retaining screws [V]. **Fig.6**

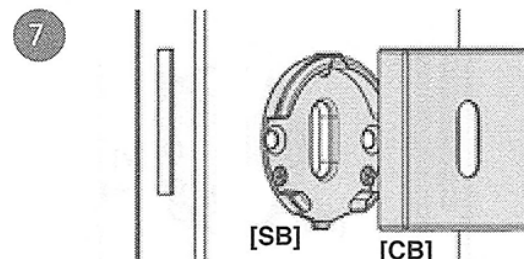

7 Apply the ESCUTCHEON'S COVER [CB] on the UNDER - ESCUTCHEON [SB] by pressure. **Fig.7**

FITTING KIT 01

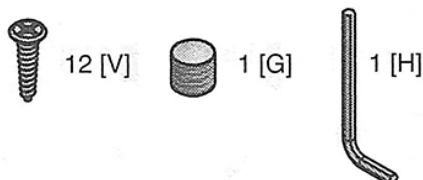

FITTING KIT 02

